




How to upgrade EW-7438RPn V2 with Firmware Upgrade Tool

Note:

1. This instruction uses pictures which are from EW-7438RPn V2.
2. If you need to restore to the default settings, press the WPS button about 15~20 seconds until you see the green PWR LED turn off and blink. That will restore the default settings.


Step by Step Instruction:

1. Plug the EW-7438RPN extender into a power outlet close to the root wireless access point and switch the Extender on.

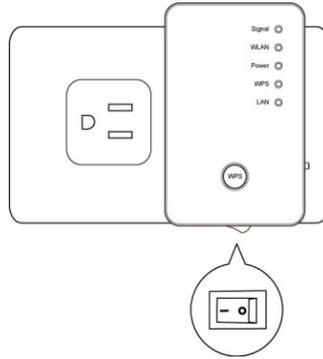


2. Turn on your laptop & browser (IE, Firefox, or Chrome) and go to website: www.edimax.us



3. Click on **Download**

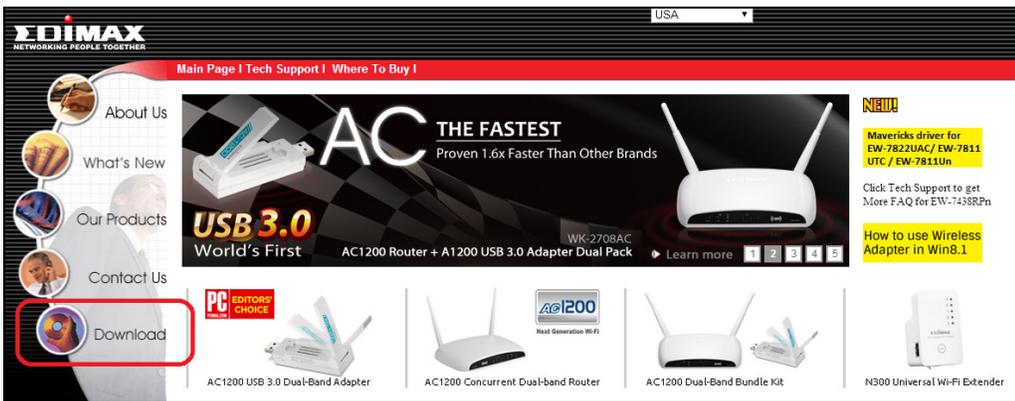


4. Download the EW-7438RPN upgrade tool and save it on your desktop.

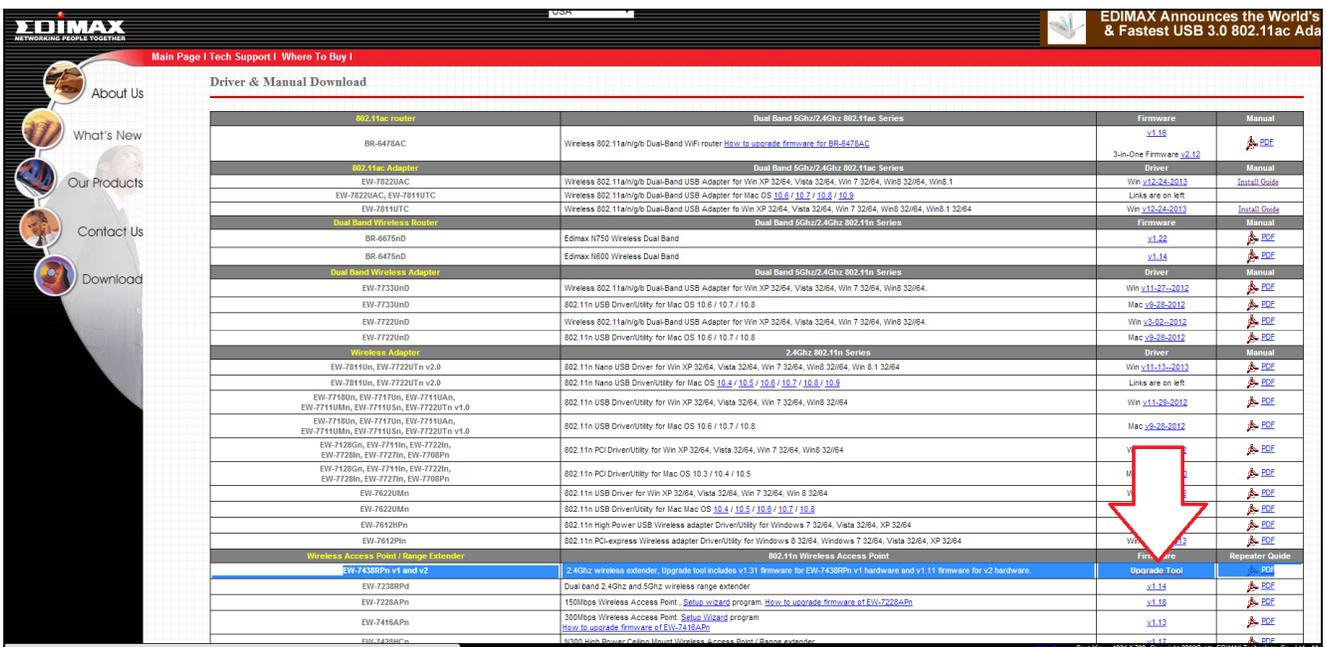


5. Connect to Edimax EW-7438RPn Extender V2 through wireless

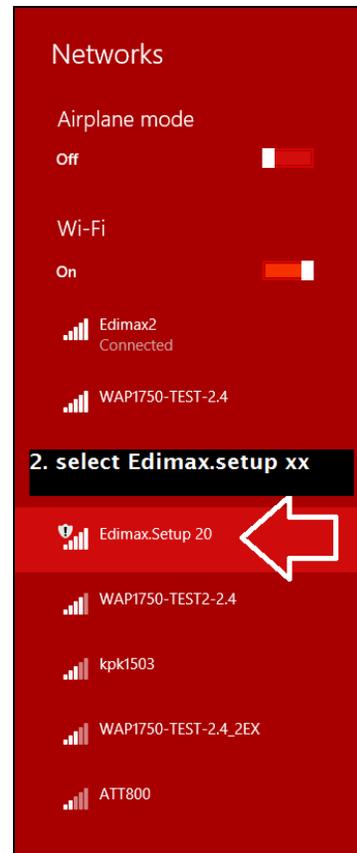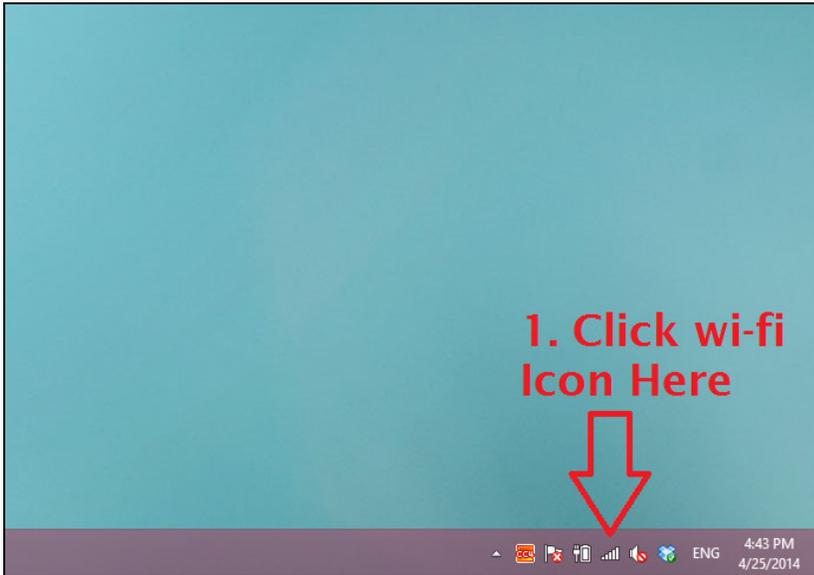


6. After connected, you should see the connected network like the image below.

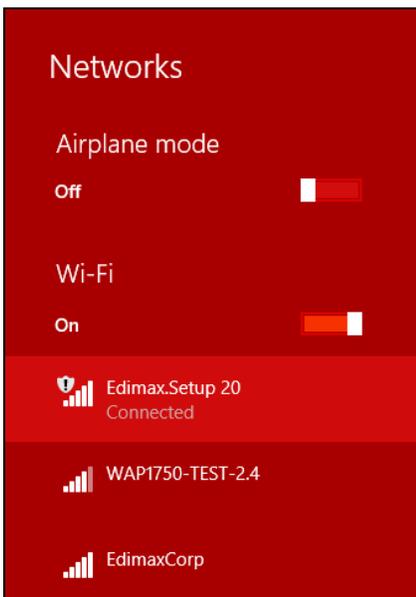

7. Double click the firmware upgrade tool

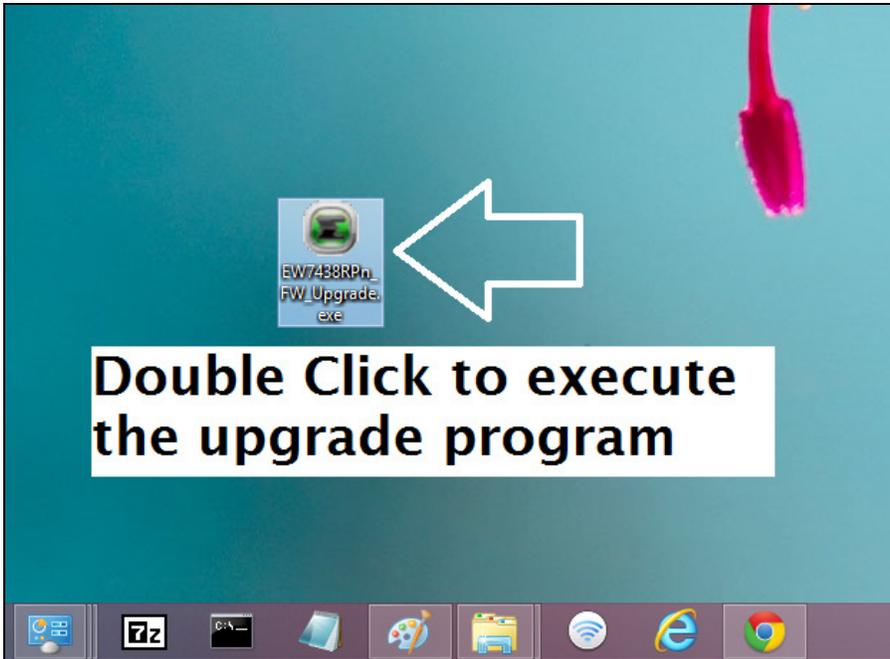

8. And then follow the on-screen instruction to upgrade the firmware step-by-step

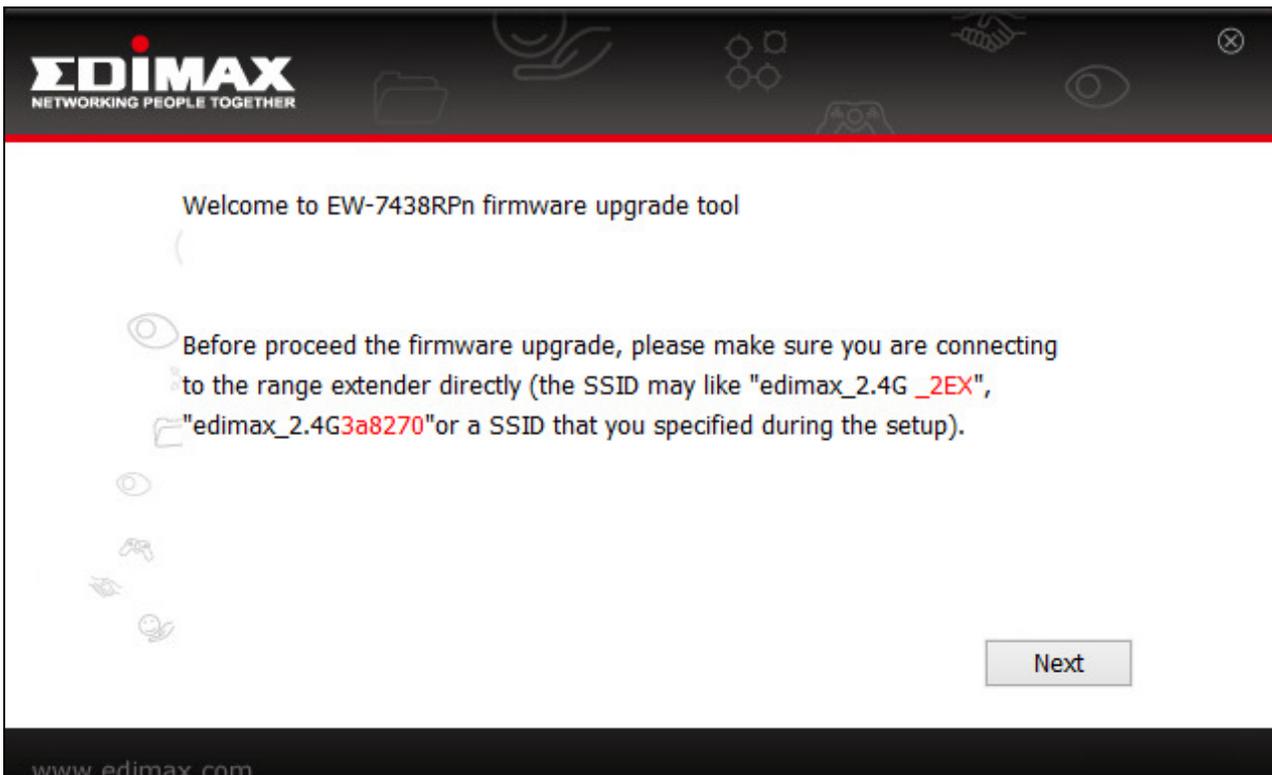

Please enter the password of your 7438RPn (default is 1234):

1234



Next

The firmware version for your range extender will be upgrade to V1.11

Note:

1. Please make sure your computer has stable wireless connection to your network.
2. Do not power off the device during the firmware upgrade process. Press Next when you are ready to continue.

Next

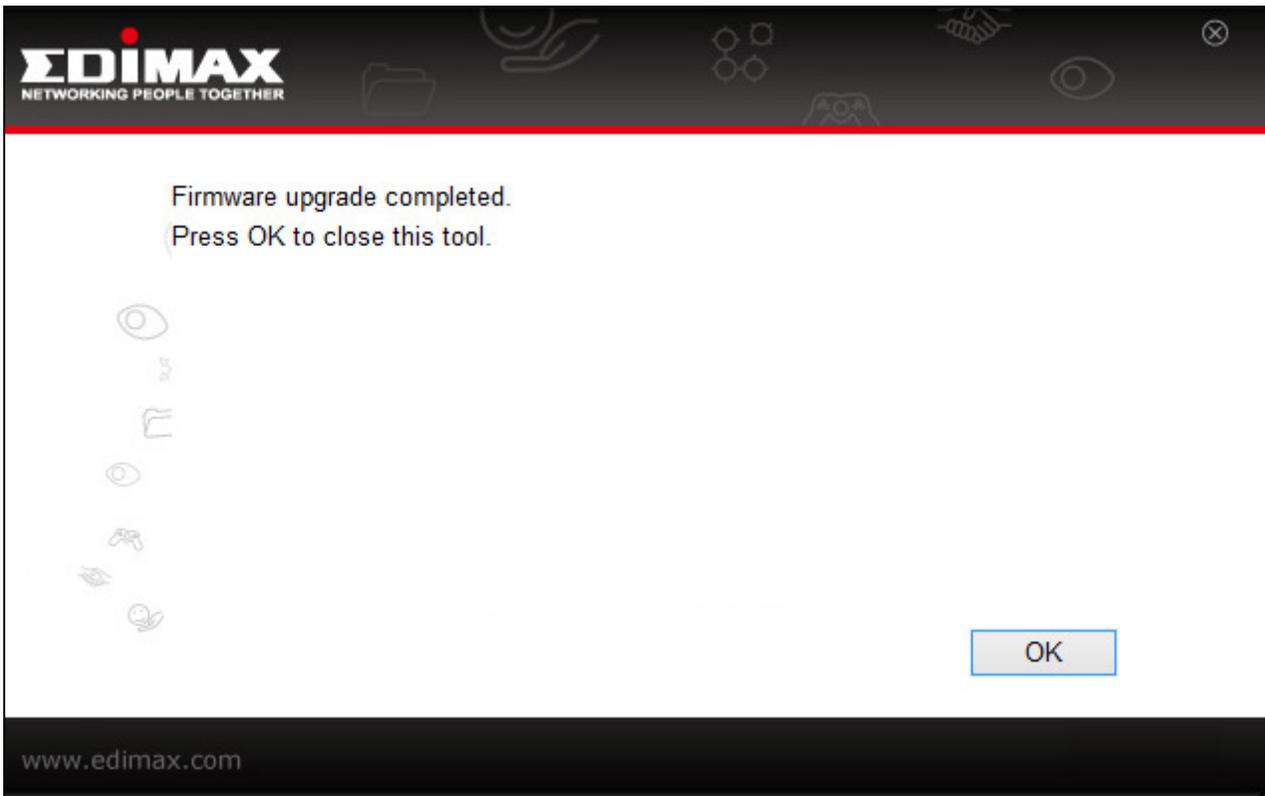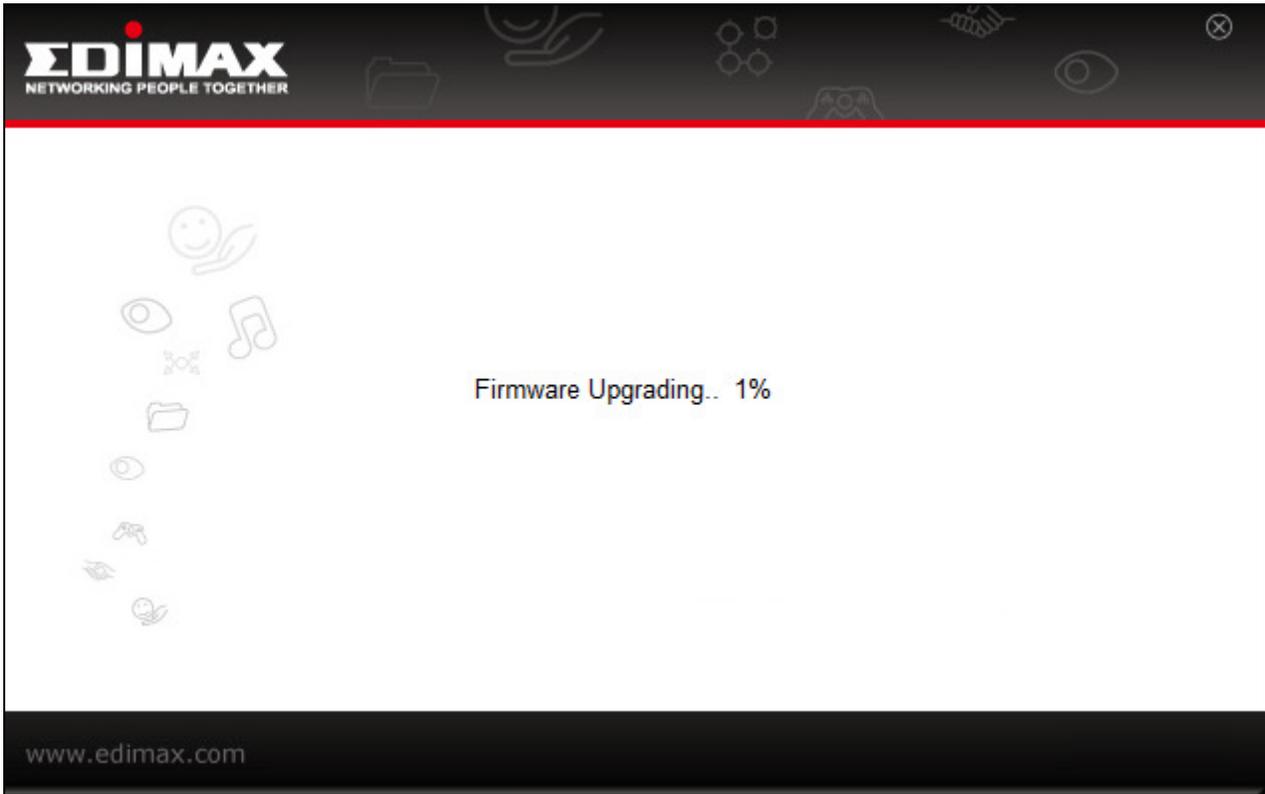

9. Congratulation! You just upgrade firmware for your EW-7438RPn.