

How to setup the wireless function of IC-3015Wn

Thanks for purchasing Edimax IC-3015Wn camera. This instruction is to setup IC-3015Wn connect to a wireless network.

Assumptions

1. You know the name of your wireless network.
2. You know the wireless security password used in your wireless network.

© 2012 Edimax Computer
3350 Scott Blvd., Building #15
Santa Clara, California 95054, USA
Phone 408-496-1105 • Fax 408-980-1530
www.edimax.us




Click on Start >> All Programs >> Internet Camera >> EdiView Finder Utility.



Find the IP address of IC-3015Wn.


Click X on the top right corner to close the EdiView Finder Utility.

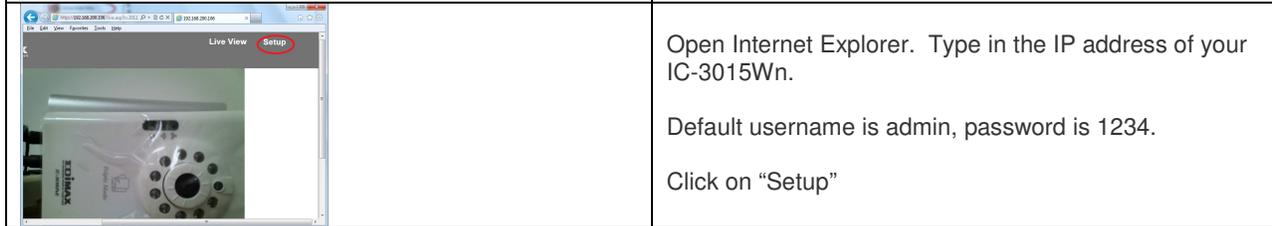

Open Internet Explorer. Type in the IP address of your IC-3015Wn.

Default username is admin, password is 1234.


Click on "Setup"

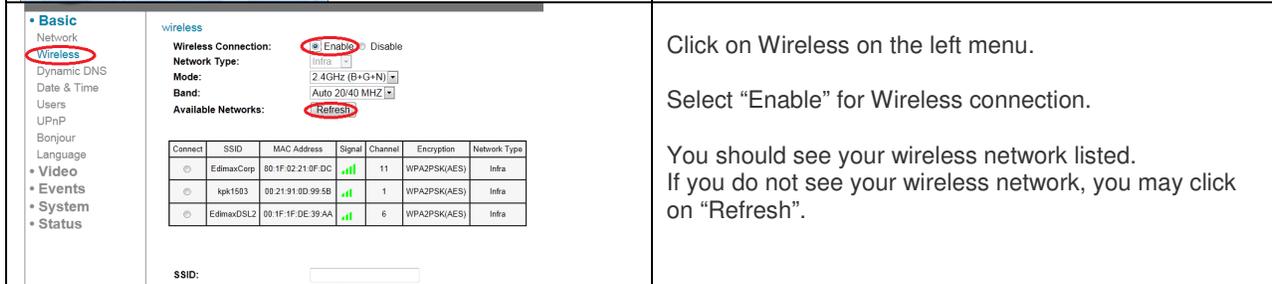

Click on Wireless on the left menu.

Select "Enable" for Wireless connection.


You should see your wireless network listed. If you do not see your wireless network, you may click on "Refresh".

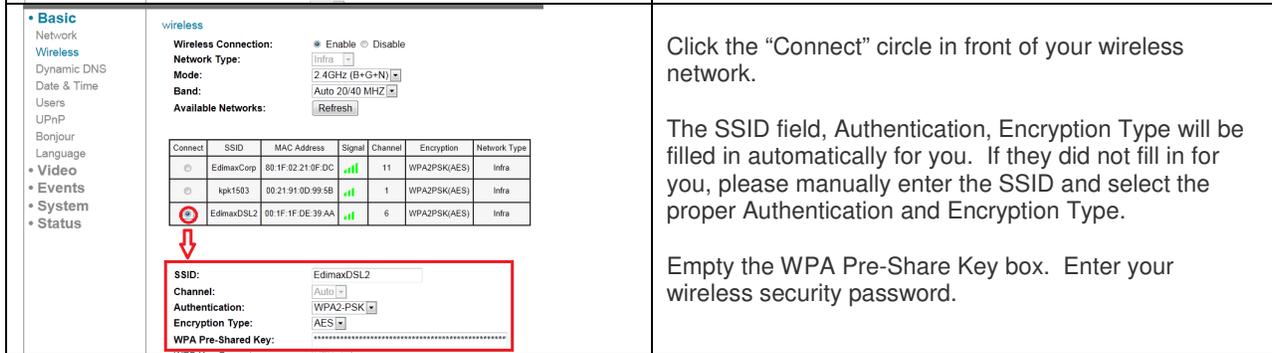

Click the "Connect" circle in front of your wireless network.





The SSID field, Authentication, Encryption Type will be filled in automatically for you. If they did not fill in for you, please manually enter the SSID and select the proper Authentication and Encryption Type.

Empty the WPA Pre-Share Key box. Enter your wireless security password.

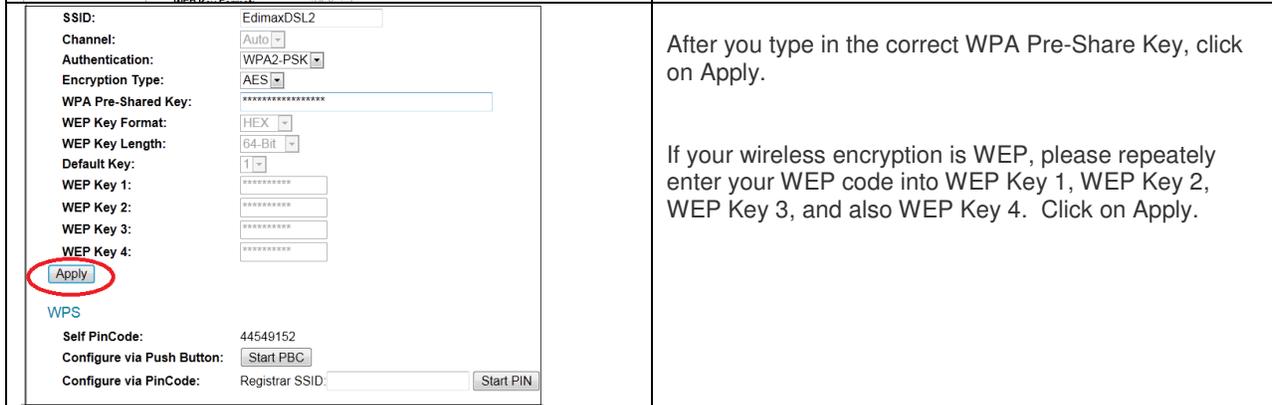

After you type in the correct WPA Pre-Share Key, click on Apply.

If your wireless encryption is WEP, please repeatedly enter your WEP code into WEP Key 1, WEP Key 2, WEP Key 3, and also WEP Key 4. Click on Apply.
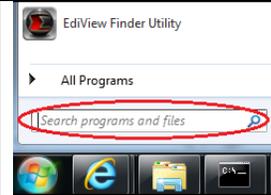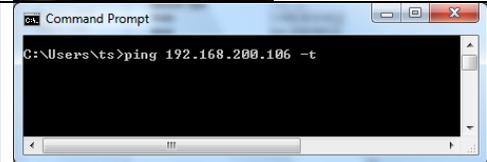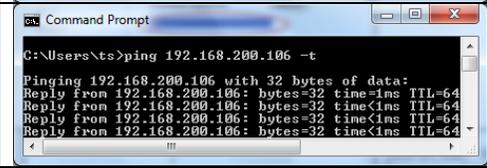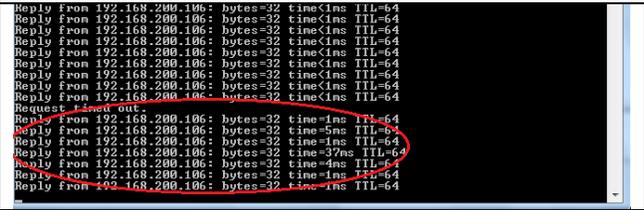
<ul style="list-style-type: none"> • Basic Network Wireless Dynamic DNS Date & Time Users UPnP Bonjour Language • Video • Events • System • Status 	<p>wireless</p> <p>Wireless Connection: <input checked="" type="radio"/> Enable <input type="radio"/> Disable</p> <p>Network Type: Infra</p> <p>Mode: 2.4GHz (B+G+N)</p> <p>Band: Auto 20/40 MHZ</p> <p>Available Networks: Refresh</p> 	<p>Once you click on Apply, you would see a blue process bar. The blue bar disappeared in a few seconds. You are back to the Wireless setting page. Minimize your web browser.</p>
		<p>Click on Start. Go to the box "Search programs and files". Type in "cmd" hit Enter.</p>
		<p>In the black command prompt window, type in the PING command with the IP address of your IC-3015Wn.</p> <p>And add the "-t" parameter at the end. Hit Enter key.</p>
		<p>The reply will not stop.</p>
<p>Unplug the Ethernet cable from the IC-3015Wn.</p>		
	<p>While you unplug the Ethernet cable, the ping would get "request time out".</p> <p>In a few seconds, the ping would resume if the wireless connection of IC-3015Wn is successful.</p>	
<p>The Wireless connection is done. Press Ctrl+C to break the continuous ping command.</p> <p>If ping gets "request time out", please verify the wireless security password of the WiFi network and try the procedure again. .</p>		